

Ventilator Circuit Stabilizer

#701VCS

DIRECTIONS:

- 1 Slide end marked **(B)** around the patient's back and attach to end marked **(C)**.
- 2 Lay ventilator circuit tubing on top of connected ends **(B)** and **(C)**. Take end piece marked **(D)** and lay over ventilator circuit and attach to the opposite side of **PART A**.

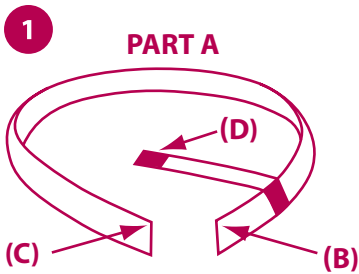


Fig. 1

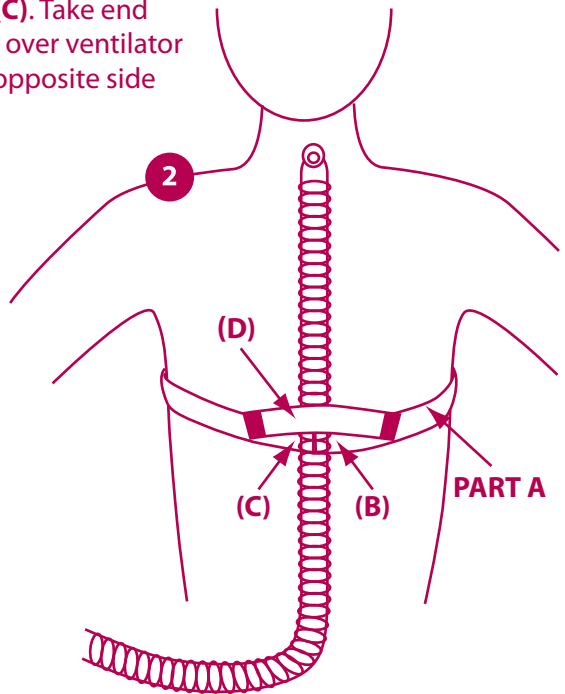


Fig. 2